

Configure tab - Select YSF as the mode
Make sure that the proper simplex frequency is entered for the hotspot

Yaesu System Fusion Configuration

Setting	Value
YSF Startup Host:	YSF06864 - US-Penn-Link_1 - XLX045A YSF 
UPPERCASE Hostfiles:	<input checked="" type="checkbox"/> Note: Update Required if changed
WiresX Passthrough:	<input type="checkbox"/>

1. Select YSF Startup Host:
 - XLX045A US-Penn-Link_1 (PA Cross Mode TG)
 - XLX545B US-Penn-Link_3 (PA Cross Mode TG)
 - XLX045D US-Penn-Link_2
 - XLX045E US-Penn-Link_4
 - XLX545E US-Penn-Link_5
 - XLX045B US-Penn-Link_6
 - XLX045C US-Penn-Link_7
 - XLX545A US-Penn-Link_8
2. UPPERCASE Hostfiles: on
3. WiresX Passthrough: off
4. **Apply** Changes