

Setting up DMR for XLX045 on a PiStar Hotspot

DMR Configuration	
Setting	Value
DMR Master:	DMRGateway
BrandMeister Master:	BM_United_States_3102
BM Hotspot Security:	
BrandMeister Network ESSID:	3142263 01
BrandMeister Network Enable:	<input type="checkbox"/>
BrandMeister Network:	Repeater Information Edit Repeater (BrandMeister Selfcare)
DMR+ Master:	DMR+_IPSC2-Australia
DMR+ Network:	Options=
DMR+ Network ESSID:	3142263 None
DMR+ Network Enable:	<input type="checkbox"/>
XLX Master:	XLX_045
XLX Startup Module:	A
XLX Master Enable:	<input checked="" type="checkbox"/>
DMR Color Code:	1
DMR EmbeddedLCOnly:	<input type="checkbox"/>
DMR DumpTADData:	<input checked="" type="checkbox"/>

1. Make sure the DMR mode is enabled
2. On the configuration page, under “*DMR Configuration*” change the “**DMR Master**” to “**DMRGateway**” and APPLY.
3. Back under “DMR Configuration” change “XLX Master” to “XLX_045” #you can opt to disable DMR+ Network to disable the additional voice traffic.
4. Choose “A” for the module (or B, C, D, E, ...Z)
5. Enable “*XLX Master Enable*”
6. Apply Changes
7. Go to the Dashboard, DMR should show linked to XLX045A (PA Cross Mode)

In your DMR codeplug:

1. Create a new contact:
Name: “PiStar TG 6” TG= 6 (group call) Hotspot freq.

